




# Model MC 12 TWIN LOOP MANUAL CLOSER

**Instruction Manual & Parts List** 


# OPERATING INSTRUCTIONS TWIN LOOP MANUAL CLOSER

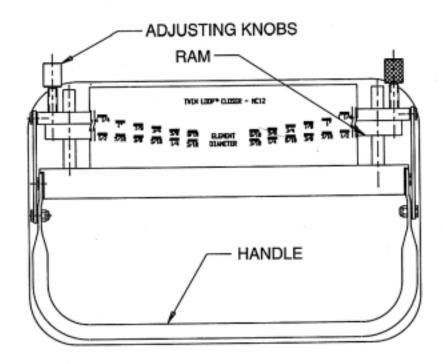

#### INSTRUCTIONS:

- Measure book thickness and determine element size from chart.
- Measure binding edge and determine number of loops per inch.
   Measure edge in inches, then multiply by number of loops per inch and subtract 1.

Example: 11" binding edge at 3 loops per inch = 33 - 1 (32 loops for an 11" binding edge)

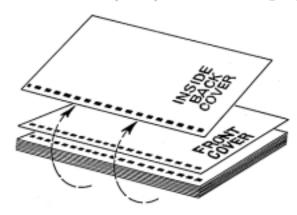

 Stack book with front cover up. Rotate back cover to top. This ensures that wire loop closure will be inside of book.




START ELEMENT




INSERT ELEMENT

Turn book over (cover down).
 Insert wire elements into book.

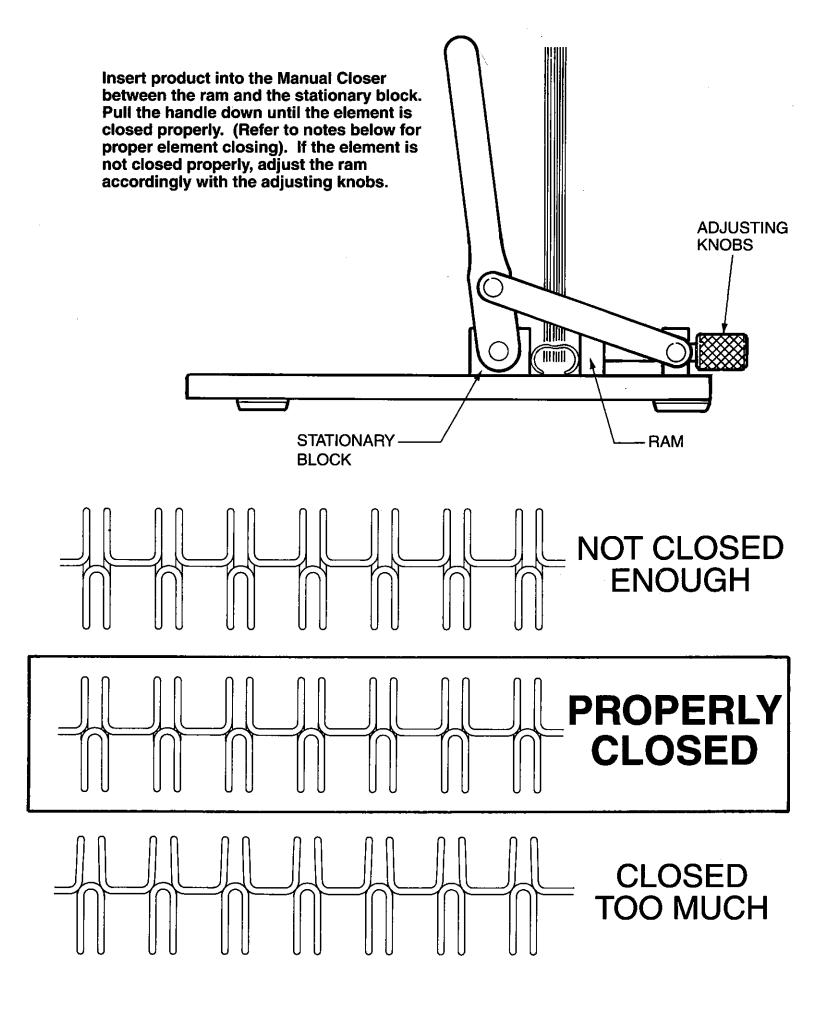

# FIGURE 1

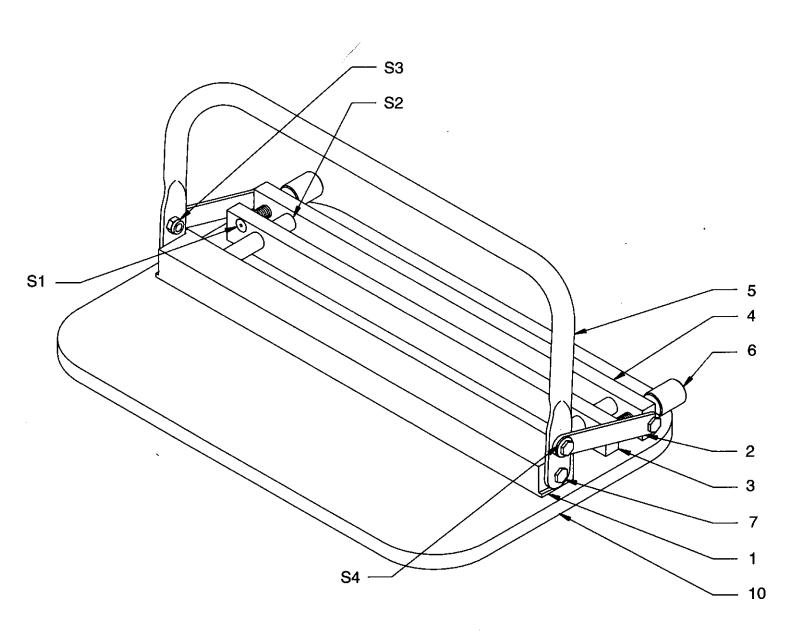


## FIGURE 1 PARTS LIST

ITEM NO.	SICKINGER PART NO.	DESCRIPTION	QUANTITY REQUIRED
1	1450001	BLOCK, STATIONARY	1
2	1450002	LINK	2
3	1450003	RAM	1
4	1450004	ACTUATOR BAR	1
5	1450005	HANDLE	1
6	1450006	KNOB - ADJUSTING	2
7	1450007	SHOULDER SCREW - HEX	6
8	4800128	LABEL - MANUAL CLOSER	1 (NOT SHOWN)
9	4800129	LABEL - LOGO	1 (NOT SHOWN)
10	4800780	BASE	1
11	7501800	FEET - SELF ADHESIVE	4 (NOT SHOWN)

### STANDARD PARTS LIST

S1	7502300	SHOULDER SCREW - 1/4 DIA X 3/8	2
S2	750267 <del>9</del>	DOWEL PIN - 1/2 DIA X 4"	2
S3	7503047	LOCK NUT - ESNA 1/4-20	2
S4	7504123	WASHER622 OD X .317 ID X .06 THK	6
S5	7508645	FHCS - 1/4-20 X 3/4	4 (NOT SHOWN)

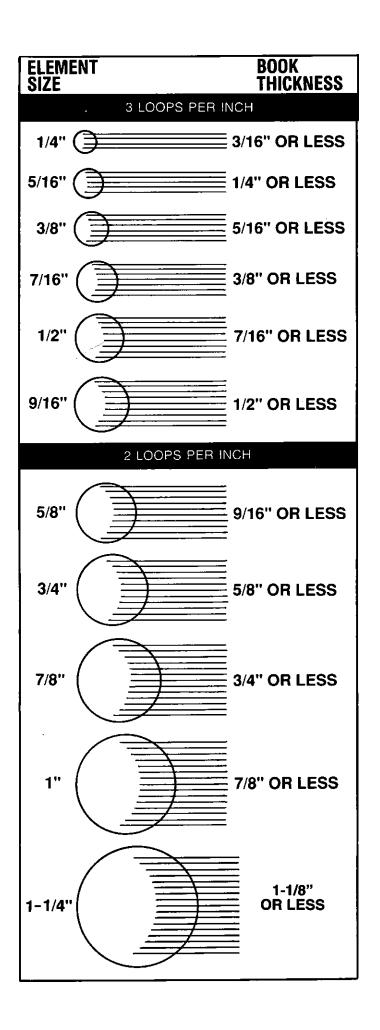



One GBC Plaza Northbrook, Illinois 60062