


Remove the Cover of CP2's Crimping Unit

1. Switch off the locker.



2. Loosen the both side screws at back side.

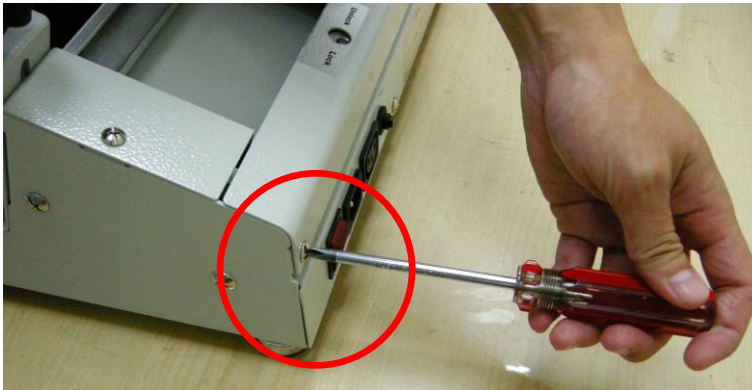


3. Take off the collection bag




4. Loosen the both side screws.




5. Loosen these screws

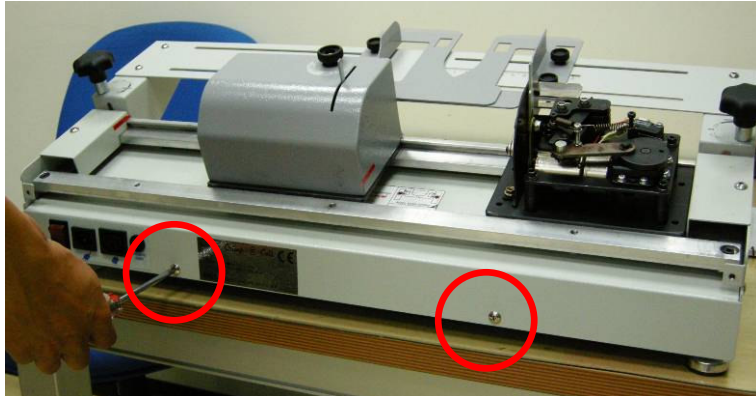

6. then, as the photo showing below

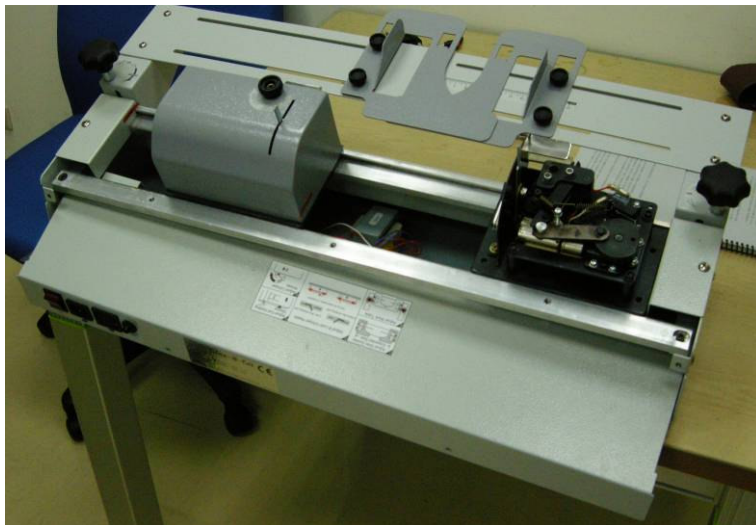


7. Pull out these two plugs

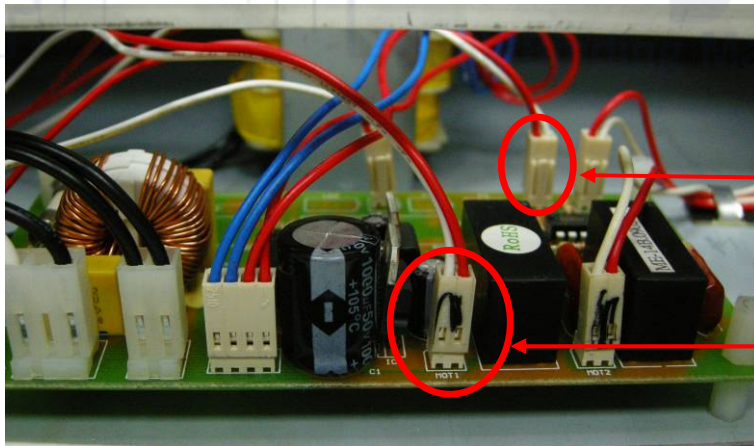

Left Side Sensor Plug

Left Side Motor Plug
with black mark


8. Loosen the screw inside the knob

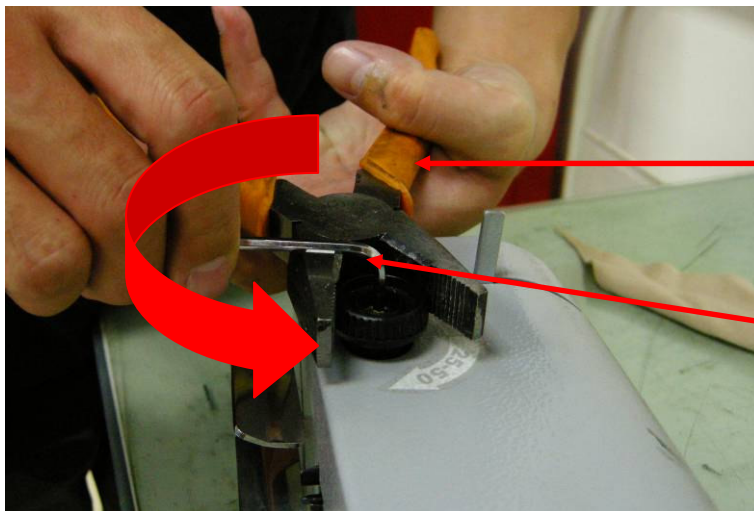


Hold the pliers

Clockwise Turn the
Allen Key

9. Loosen the bottom screws

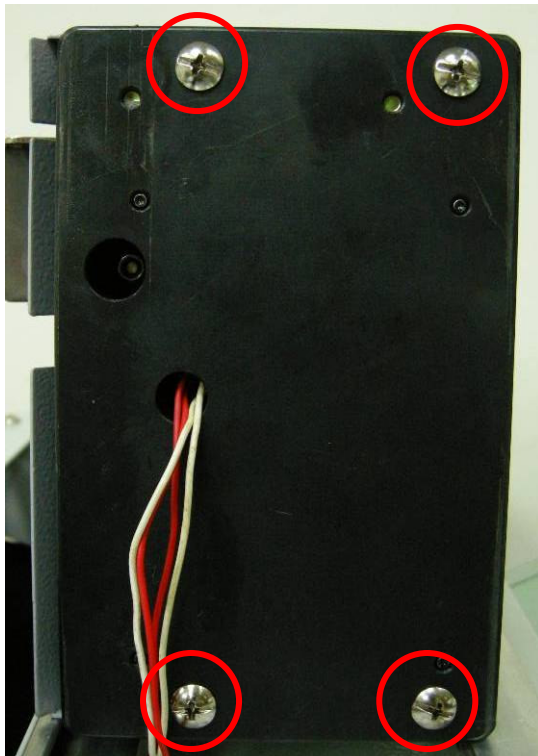

10. Remove the Cover of Crimping Unit.

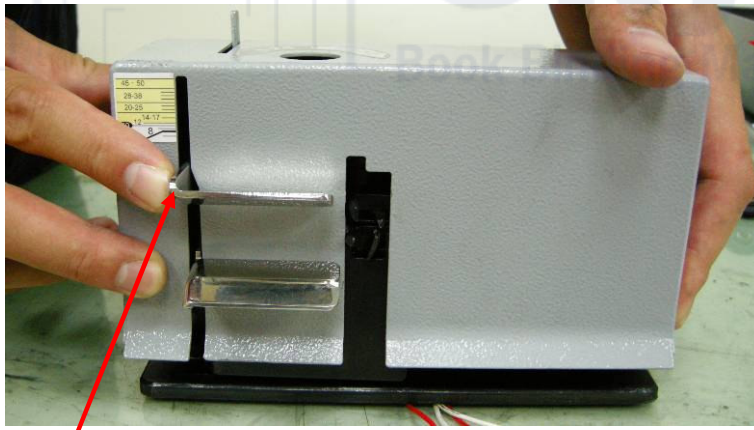

Tip: To remove the cover easily, Finger push the coil hold device