



Skyline

Book Binding Machines & Supplies

Sales • Service • Repair

Professional Service – Fast Nationwide Shipping

1-866-455-9900

www.OnlineSkyline.com CustomerService@onlineskyline.com

AJ-700 Paper Jogger Service Manual




April 28, 2004

Content

1. How to remove the Operation Panel	3
2. How to Remove the blower motor.....	5
3. How to remove the paper tray and motor	7
4. How to remove the casters.....	9
5. How to remove the head and pipe.....	11

1. How to remove the Operation Panel


- (1) Remove the back plate (Screws at four locations)

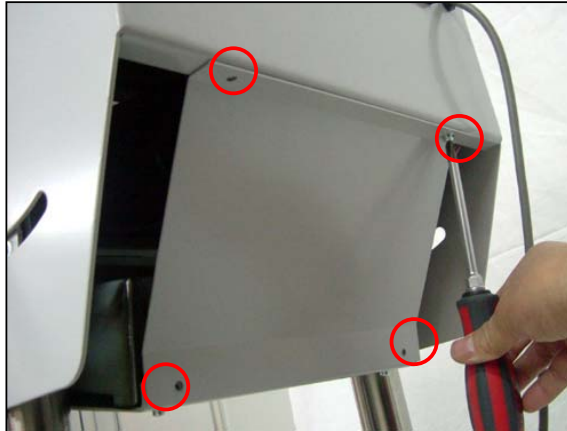

- (2) Screws at two locations are fastened from the bottom.



(Right side when seen from the back)

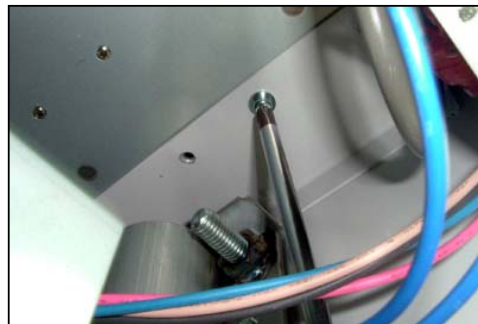


(Left side when seen from the back)

- (3) Remove the inlet of the power (AC) cord.





(4) Pull out the four terminals.

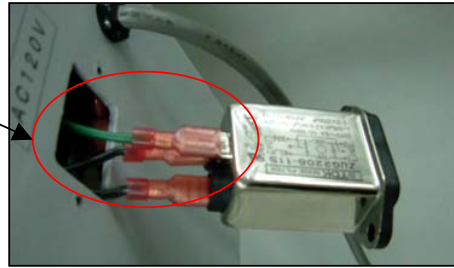

(5) Draw out the Power Box from the front.



[Wiring]

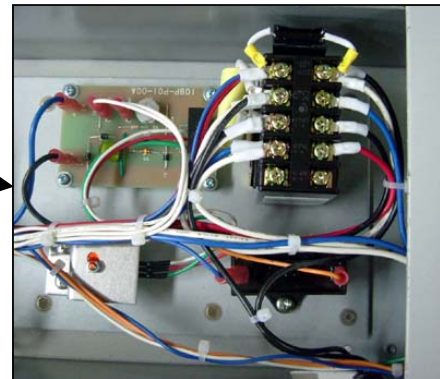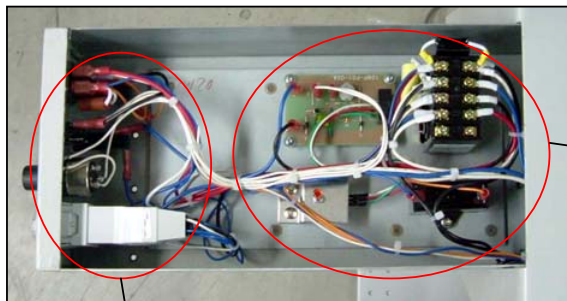


2. How to Remove the blower motor

(1) Remove the back plate.




(The photo shows it removed)


(2) Pull out the terminals at two locations.

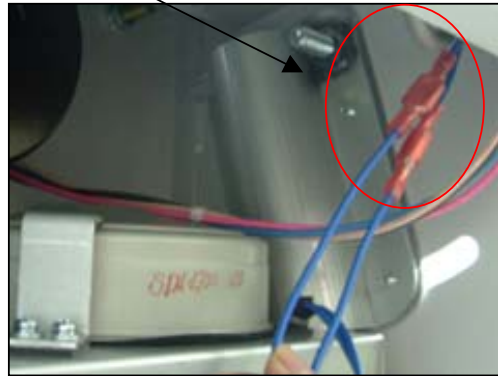


(3) Remove the screws from the four locations from the bottom.

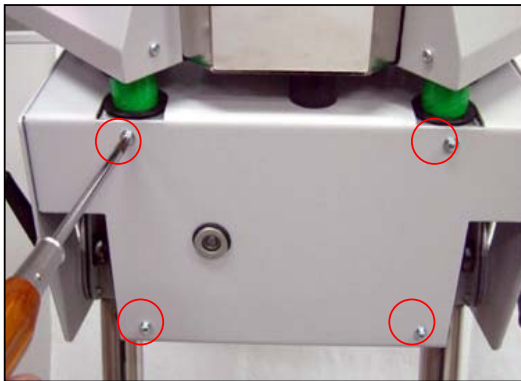

Blower Box drawn out of the machine body (unit)

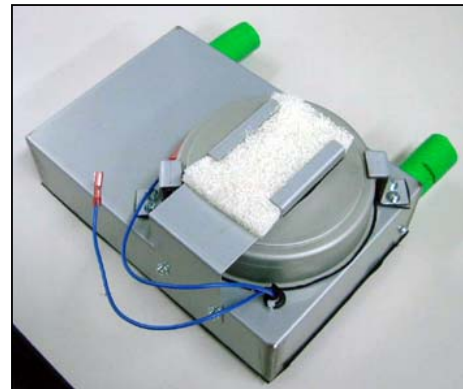

(4) Remove the filter fitting.

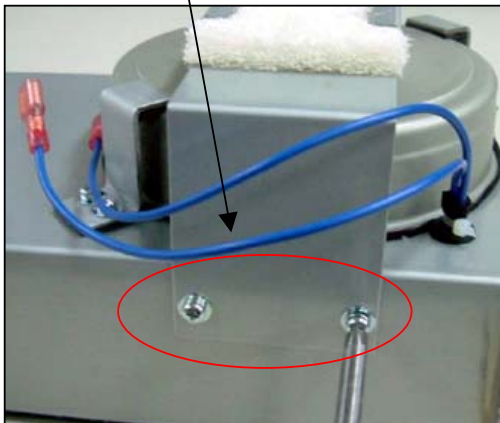

(5) Remove the blower retainers from the two locations and draw out the blower upward.



* The photo shows when the blower was drawn out upward.




3. How to remove the paper tray and motor


- (1) Remove the paper tray holding screws
(countersunk hexagon screws)



◆How to remove them◆

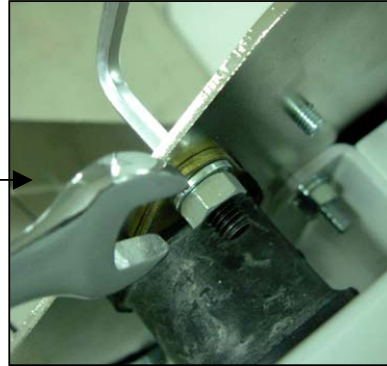

- (2) Remove the hose holding screws.

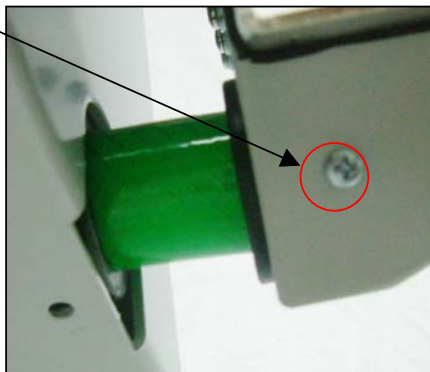

- (3) Be careful not to pull it out too much as there is a motor cord.
(Prepare a table where the paper tray is placed)




The photo shows the


* If the paper tray only is moved to a different place, the motor cord must be disconnected.

(4) How to remove the paper tray

Remove the holding screws from the four locations.

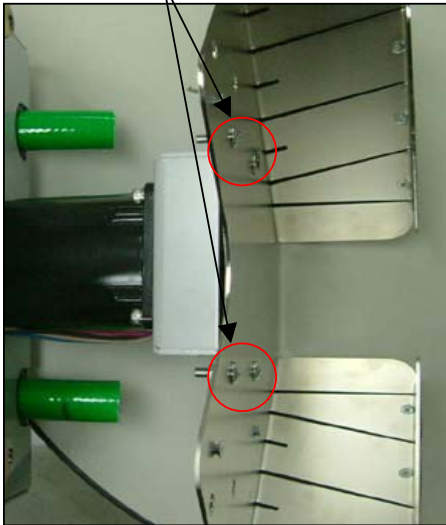


Use a Phillips screwdriver and spanner.

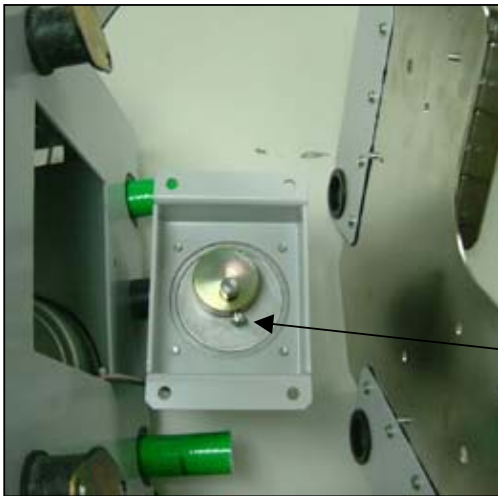

The photo shows when the paper tray and motor unit are separated.

Screwing in of the weight

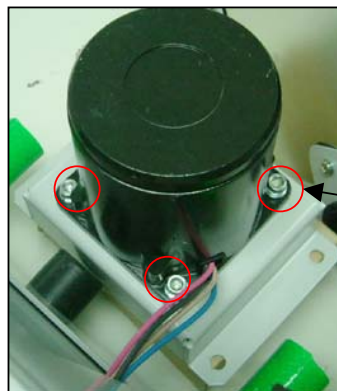

Removal of the motor

Remove the motor holding screws.

4. How to remove the casters



The machine should be laid down when performing this work.

Remove the screws from
the four locations.



5. How to remove the head and pipe

* Installation precaution Tightening snugly is sufficient (Over tightening this makes the head move poorly).

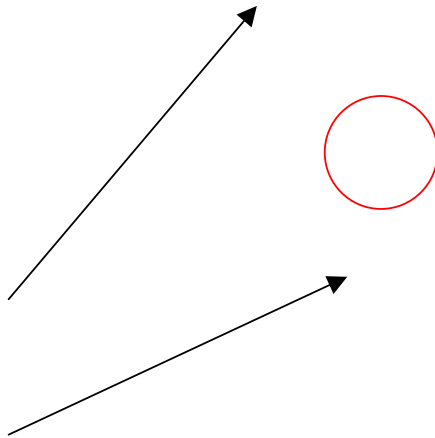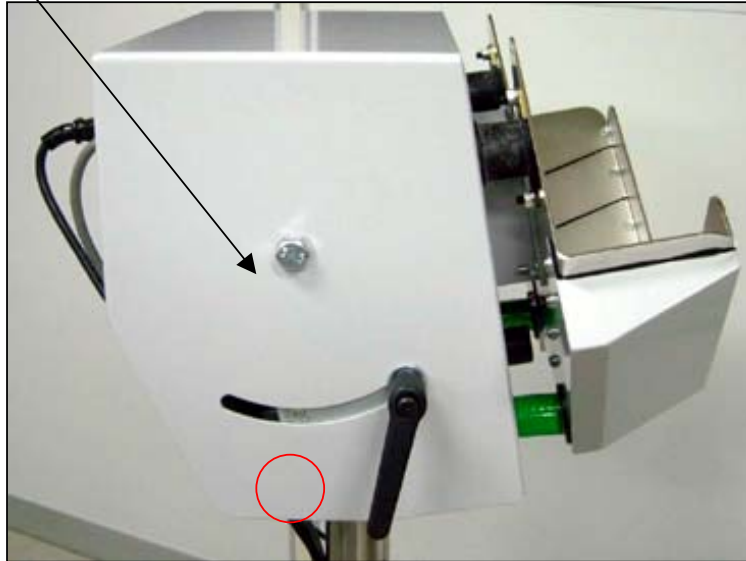



Remove the clump handle and bolt.







* When the head is removed, it is advisable to remove the pipe while laying down the machine or turning it upside down.

The photo shows when the pipe was removed from the head.

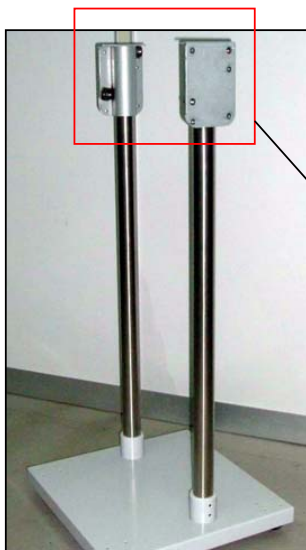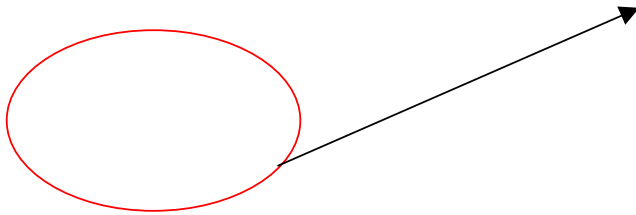

The photo shows when the head was removed.

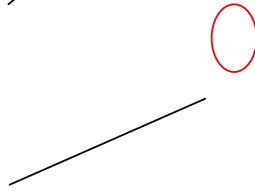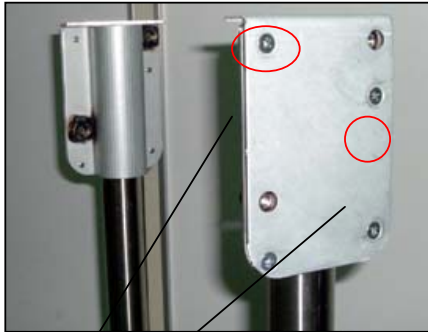

Removing the countersunk screws enables to the pipe to be removed.



Loosen the screws and pull it out upward.